



Parata Max[®]2 High-Speed, Vial-Filling Robot

Key Features

Bang for Your Buck: Max 2 offers the highest accuracy, speed, and output available – at the lowest cost per prescription.

Continuous Operation: Two-sided design separates inventory and dispensing. Max 2 continues to run while you replenish vials, caps, and drugs. Max 2's low-touch operation is largely attributed to its ability to cap and stack filled vials.

Verification Camera: An internal camera captures an image of every filled vial for easy verification and record-keeping.

Built-In Automated Cell Calibration: Intelligent software enables on-demand, accurate cell calibration on site – no guess work, no matter the operator – avoiding costs and delays of cell exchanges.

Quiet Notification Lights: Color-coded LED lights let you know when to replenish vials, caps, and labels – before you run out.

Internet of Things Connection: Parata Pulse keeps an eye on the health of your Max 2 for reliable reporting and business efficiency. Request help from Parata right from Max 2's touchscreen without ever picking up the phone.

Rx Volume Automated
Unique NDC Cell Capacity
Standard Configuration
Storage Capacity
Accuracy

Up to 80% of oral solids on average
Configure from 111 (22 standard cells with 89 super cells) to 200 standard cells
156 standard cells and 22 super cells
232 completed vials stored before requiring attendance
100% accurate for drug and dose when proper processes are followed by the pharmacy

Optional Complements
Certifications
Pharmacy Software Integrations
Certified Vial Providers

Patented locking drug cells. Vuca MedsOnCue QR codes.
UL certified and pending UL GREENGUARD Gold Certification for indoor air quality
Parata integrates with 100+ host systems
Tri State Distribution, Berry, and Centor/Rexam

Network Requirements
Power Requirements

One Ethernet RJ-45 jack and one IP address on local network
120V, 20A, 60Hz with one dedicated NEMA 5-20 receptacle located in the ceiling above the unit

Parata Max[®]2 High-Speed, Vial-Filling Robot



Monitor status from across the room with color-coded LED lights to quietly let you know when Max 2 needs attention.


Collect and store an image of every filled vial for accuracy and safety.

Overflow bin and exception carousel allow Max 2 to keep running even when shelves are full or scripts require review.

Navigate workflow with intuitive touchscreen and software, on-demand access to training, documentation, and service.

Quickly swap NDCs and add new drugs with intelligent, built-in cell calibration.

Enter all unique NDC information with one, quick scan using the new 2D barcode scanner.

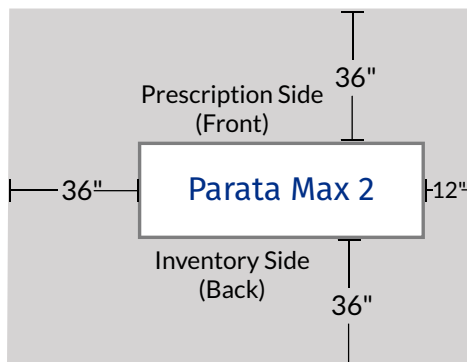

Dimensions	Width (in)	Height (in)	Depth (in)
Parata Max (unit)	79-3/8	79-1/4	28-3/4
Total Space	127-3/8	91	100-3/4
Weight	Unloaded (lb)	Loaded (lb)	
	2,106	~2,378	